



POLKA WALL HOOKS

Installation guide

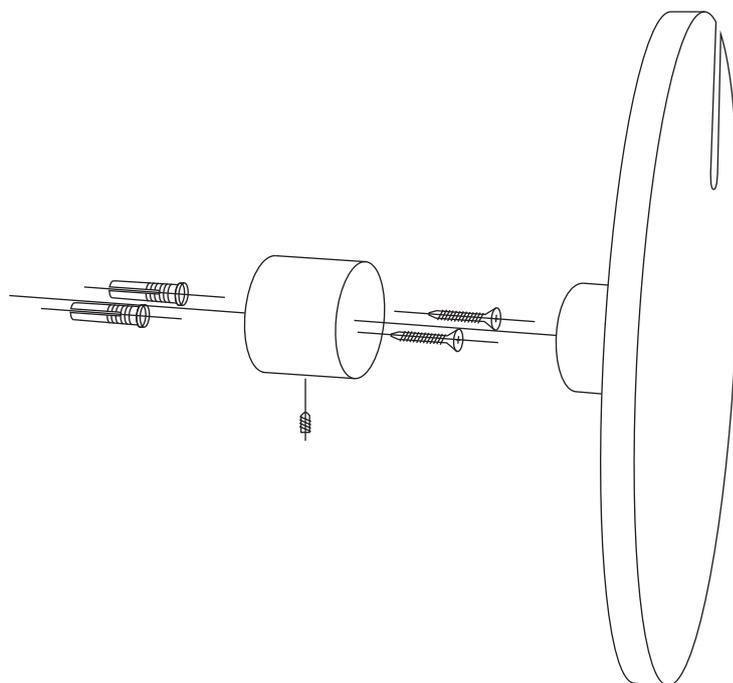



font.

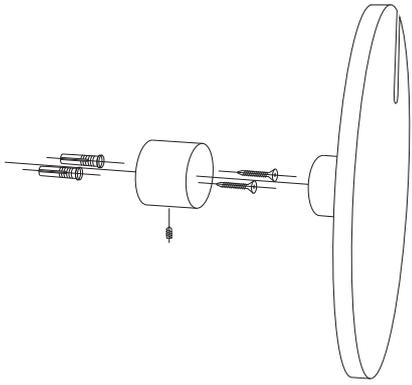

When installing your POLKA wall hooks, it's essential to ensure that they are securely and accurately fixed. The most effective installation method varies depending on the type of wall you're working with. Each hook requires two wall plugs, and it's crucial to choose plugs that are appropriate for your wall material. If you're uncertain, seek guidance at your local hardware store. They can help you select the correct wall plug and screw.


Follow these steps:

1. Carefully unscrew the hex screw on the rear mount halfway. You will find a suitable allen key in the package.
2. Choose screws & dowels that match the wall type.
3. Mark the locations of the holes on the wall, then drill them, put the dowel into the hole.
4. Screw one half of the bracket onto the wall.
5. Fit the hook, then tighten it using the Allen screw & Allen key.

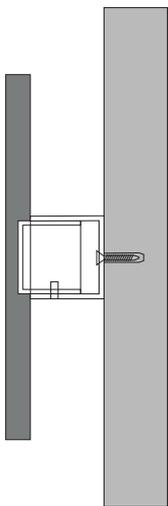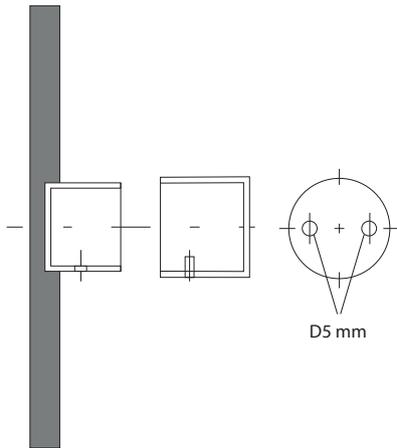


Concrete wall.

When mounting to concrete walls, a wall plug is necessary. Keep in mind that concrete walls, particularly in newer buildings, can be thin, so a specialized plug may be needed.

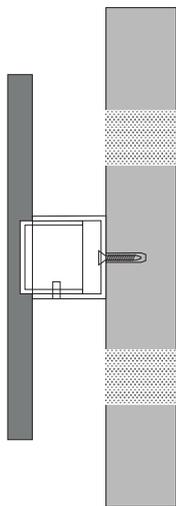


Brick wall.

When mounting onto a brick wall, it's important to use a wall plug. Ensure that you drill into the bricks themselves, rather than the mortar surrounding them.

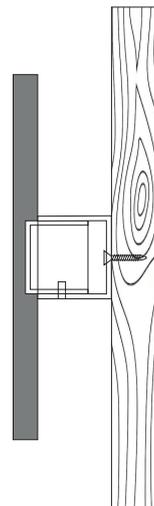

Wooden wall.

When attaching your product to a wooden surface, specific wood screws are necessary.

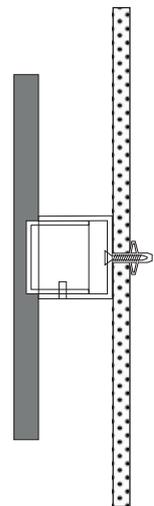


Drywall.


Drywall is composed of a porous material, so it's crucial to use a wall plug specifically designed for drywall when mounting.

Arrangement ideas

Walls with ~ 75 cm width

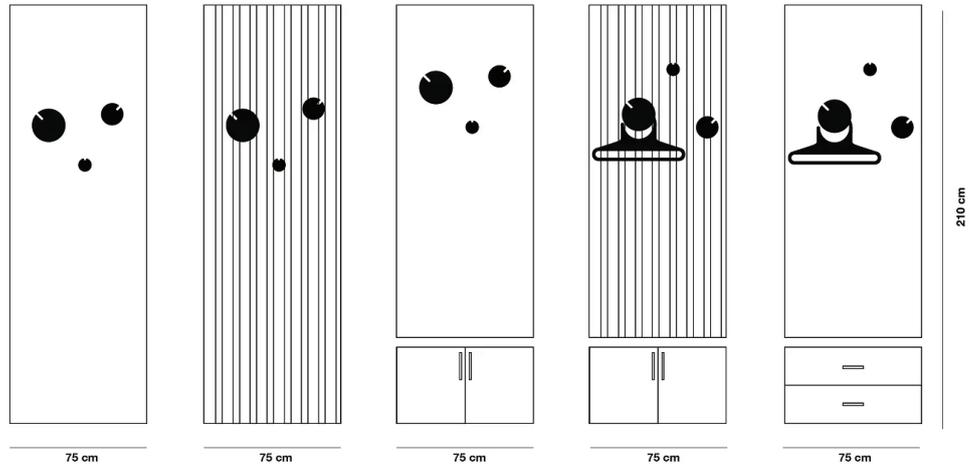

Walls with ~ 100 cm width

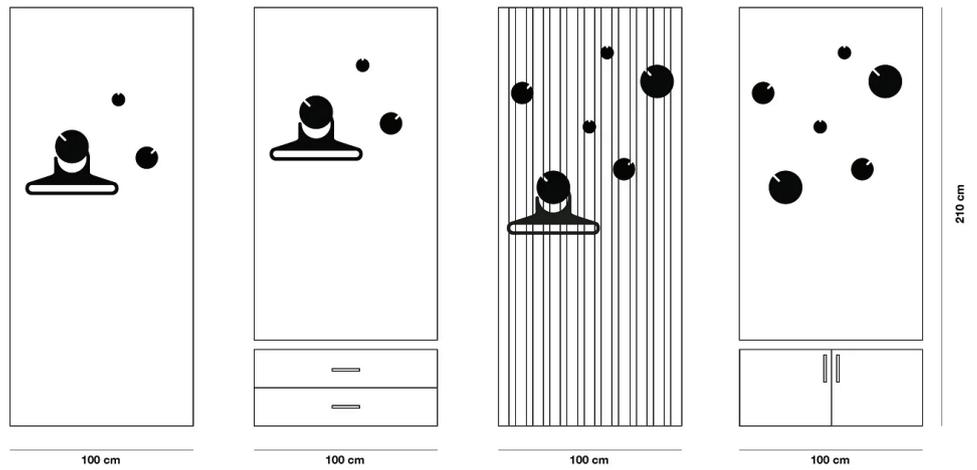

Walls with ~ 125 cm width

